


JAZZ MP3 Player Instruction Card

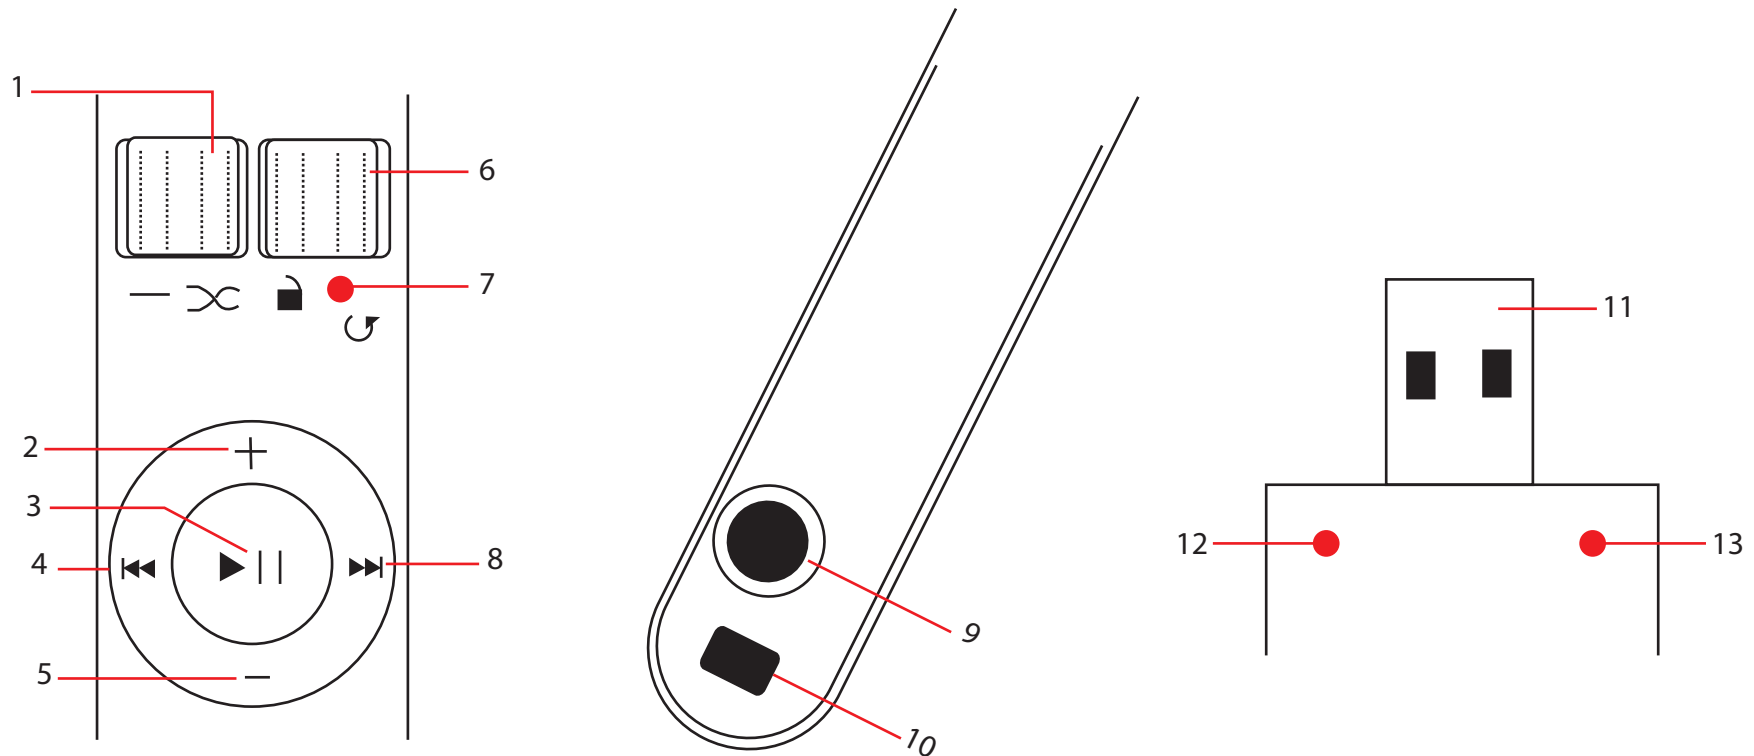

U3FB Flash Disk Playback

1. Left - normal playback, Right - random playback
2. During playback, press button to increase volume level
3. During playback, press button to pause; press again to resume playing
4. During playback, press button once to skip to previous track.
5. During playback, press button to decrease volume level
6. Left - key Lock, Right - Unlock
7. Reset
8. During playback, press button to skip to next track.

9. Earphone jack

10. Hole for neck strap

11. USB Connector

12. Red light on while charging

13. Orange light flashes when transmitting files or playing songs.

System Requirements

Windows 98SE, 2000, ME, XP; Mac OS 8.6, 9.1, OS X 10.1.5 and above
Intel Pentium PC or equivalent; Mac computer with USB support
CD-ROM drive (if drivers are needed)
USB 2.0 port required for Hi-Speed transfer