


# rePlay Pro MP3 Player: Quick Reference Card

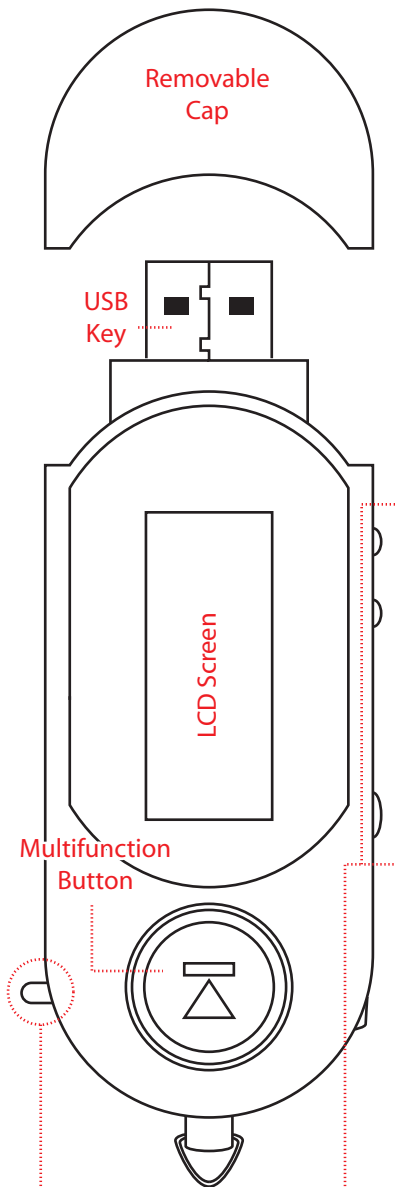

## Inserting/Replacing the Battery

The rePlay Pro uses 1 AAA battery. The battery cover on the back side of the device slides off easily when the removable cap is off.


## Adding/Removing Music

To manage files on your rePlay Pro, connect it to your computer by plugging the USB key into a USB port. Access the new directory made available after insertion. You can now copy files to the device by dragging and dropping them into the device's directory. You can also delete and copy files from this directory. If desired, you can create sub folders for different albums or playlists. Safely remove the player when finished.

## Turning On/Off, Playing Music, and Navigating the Menus

To turn your device on, hold the multifunction button down until the LCD illuminates. The default screen will be the 'Music' interface. You can listen to music by pressing the multifunction button once. You can skip to different tracks by clicking the Mode Toggle Switch to the left and/or right. To access the submenu for the current mode (in this case, 'Music') press the Mode Toggle Switch down like a button once. Click the switch to the left and right to access different options, and press down to enter a particular option. To access the main menu which includes all modes ('Music', 'Record', 'Voice', 'TelBook', and 'System'), press and hold the Mode Toggle Switch down. All menus and submenus contain an exit option at the end to return to the previous screen. Power off the device by pressing and holding the multifunction, just as when turning it on.

### Mode Toggle Switch

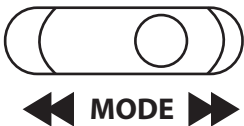

### Hold Switch & Volume Controls

